D1AA Series

INSTRUCTION MANUAL

TCD210088AC

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.



Visit Autonics website (www.autonics.com or QR code) for the latest information. Manuals, CAD files, certifications, software, etc. are available. The dimensions, specifications, certifications, etc. are subject to change without notice for product improvement. Certain models may be discontinued without notice.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ullet symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.(e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in personal injury, economic loss or fire.
- 02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. Install on a device panel to use.

Failure to follow this instruction may result in fire.

04. Do not connect, repair, or inspect the unit while connected to a power

Failure to follow this instruction may result in fire.

- 05. Check 'Unit description and function setting' before wiring. Failure to follow this instruction may result in fire
- 06. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire.

- ▲ Caution Failure to follow instructions may result in injury or product damage.
- 01. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire
- 03. Keep the product away from metal chip, dust, and wire residue which flow

Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- 12 24 VDC == model power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.

Do not use near the equipment which generates strong magnetic force or high frequency noise.

- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000 m
- Pollution degree 2
- Installation category I

Specifications

Model	D1AA-RN	D1AA-GN				
Display method	16-segment LED (red)	16-segment LED (green)				
Power supply	12 - 24 VDC==					
Permissible voltage range	90 to 110 % of rated voltage					
Current consumption	≤ 32 mA					
Character size	W 11 × H 22 mm					
Display character	61 characters and symbols (0 to 9, A to Z, 24 symbols, decimal point)					
Input	Parallel: Parallel 6 bits data, LATCH, decimal point Serial : Serial 6 / 7 bits data, CLOCK, LATCH, decimal point ⁰¹⁾					
Input resistance	20 kΩ					
Input level	High: 4.5 - 24 VDC==, Low: 0 - 1.2 VDC==					
Max. Clock 02)	≤ 3 kHz					
Output	Data output (serial input)					
Input logic	Positive logic (PNP), negative logic (NPN) selectable (by inner soldering)					
Noise immunity	$\pm300\text{V}$ the square wave noise (pulse width: $1\mu\text{s})$ by the noise simulator					
Ambient temperature	0 to 60 °C, storage: -10 to 85 °C (no freezing or condensation)					
Ambient humidity	35 to 85 %RH (no freezing or condensation)					
Weight (packaged) 03)	≈ 16 g (≈ 131 g)					

- 01) When applying the serial 6 bits input
- 02) Max. Clock is for 50: 50 (%) of duty ratio (ON, OFF ratio)
- 03) The package weight is based on four.

Product Components

Product


- Instruction manual \times 1
- Connector: CT-10S × 1

Sold Separately


- Caps: DAR (L)-R (1 set left and right, D1AA-RN dedicated)
- Caps: DAR (L)-BL (1 set left and right, D1AA-GN dedicated)

Dimensions

• Unit: mm, For the detailed drawings, follow the Autonics website.

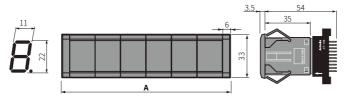


■ Panel cut-out

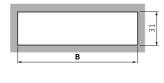


(N)	(20×N+12)	(20×N+10)		
1	32	30 ± 0.1		
2	52	50 ± 0.1		
3	72	70 ± 0.1		
4	92	90 ± 0.1		
5	112	110 ± 0.1		
6	132	130 ± 0.1		
7	152	150 ± 0.1		
8	172	170 ± 0.1		

■ Connector (CT-10S)

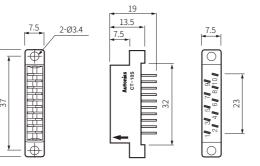

Input Circuit

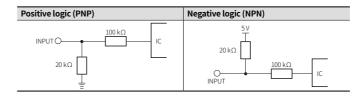



Input Data Chart

- Blank: Though entering the data, it will not display.
- · Based on the positive logic (PNP) input.

Upper 2 bits						Lower	4 bits				
D5	D4	D5	D4	D5	D4	D5 D4		D3	D2	D1	DO
L	L	L	Н	Н	L	Н	Н	צע	DΖ	דע	DU
Blank P		Blank		O		L	L	L	L		
	7	G		Blank		1		L	L	L	Н
	8		Ŗ	,	11	2		L	L	Н	L
l	-		5		8 3		L	L	Н	Н	
	ו		Ţ	5		4		L	Н	L	L
8	=		IJ	!	ъ		5	L	Н	L	Н
f	-		ļ <i>'</i>	Bla	ank	l	5	L	Н	Н	L
Ĺ	5	,	11	, ,		L	Н	Н	Н		
	-{		X		: 8			Н	L	L	L
	Ī		Y		;	9		Н	L	L	Н
i	Ţ		7	;	* 3		Н	L	Н	L	
}	Υ		[+ 5		Н	L	Н	Н		
l	_		٠,	£		Н	Н	L	L		
1	1		}		-	=		Н	Н	L	Н
	1		4		ū	7		Н	Н	Н	L
Ĺ	J J		ŕ		,′	7		Н	Н	Н	Н

Unit Descriptions

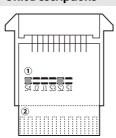

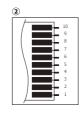

1 Function set switches

• Open 🖨: OFF / Short 🖶: ON

No.	ON	OFF	Function	Default	
S1	-	-	-	OFF	
S2	Parallel	Serial	Input	ON	
S3	7 bits	6 bits	Select serial input	OFF	
J1	Use	Not used	Serial data output 01)	OFF	
J2	-	-	-	OFF ⁰²⁾	
S4	Negative logic (NPN)	Positive logic (PNP)	Input logic	ON	

⁰¹⁾ Set as ON in serial input, as OFF in parallel input.

02) Do not change the soldering. (OFF fixed)

2 I/O terminal


Input	Parallel inp	ut	Serial input		
Terminal Code		Function	Code	Function	
1	VCC	12 - 24 VDC==	VCC	12 - 24 VDC==	
2	D0		N·C	-	
3	D1		CK	Clock input	
4	D2	Data input	DI	Data input	
5	D3	Data IIIput	DO	Data output	
6	D4		N·C	-	
7	D5		N·C	-	
8	LE	LATCH input	LE	LATCH input	
9	DP	Decimal point input	DP	Decimal point input	
10	GND	0 V	GND	0 V	

Multi-stage Connection


• Based on 4-digit, connection of rear part of the product.

■ Parallel input

Static Parallel

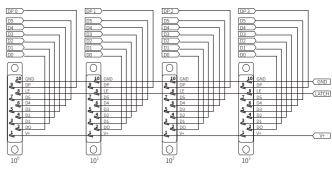

• Dynamic Parallel

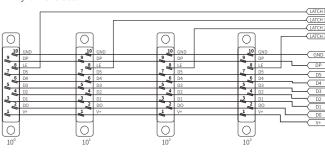

■ Serial input

