

FX Y Series
INSTRUCTION MANUAL

TCD230042AD

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.



Visit Autonics website (www.autonics.com or QR code) for the latest information. Manuals, CAD files, certifications, software, etc. are available. The dimensions, specifications, certifications, etc. are subject to change without notice for product improvement. Certain models may be discontinued without notice.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ **Warning** Failure to follow instructions may result in serious injury or death.

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime / disaster prevention devices, etc.)**
Failure to follow this instruction may result in personal injury, economic loss or fire.
- Do not use or store the unit in the place where flammable / explosive / corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- Install on a device panel to use.**
Failure to follow this instruction may result in fire or electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire or electric shock.
- Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.

⚠ **Caution** Failure to follow instructions may result in injury or product damage.

- When connecting the power / sensor input, use AWG 20 (0.50 mm²) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N m.**
Failure to follow this instruction may result in fire or malfunction due to contact failure.
- Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Power supply should be insulated and limited voltage / current or Class 2, SELV power supply device.
- Use the product, 0.1 sec after supplying power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- When the counter is operating, in case of contact input, set count speed to low speed mode (1 cps or 30 cps) to operate. If set to high speed mode (2 k, 5 kcps) counting error occurs due to chattering.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
Do not use near the equipment which generates strong magnetic force or high frequency noise.

- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

FX	①	②	-	③	④
① Display digits					
4: 4-digit					
6: 6-digit					
② Size					
Y: DIN W 72 × H 36 mm					
③ Output					
I: Indicator					
④ Power supply					
2: 24 VAC ± 10 % 50 / 60 Hz, 24 - 48 VDC ± 10 %					
4: 100 - 240 VAC ± 10 % 50 / 60 Hz					

Product Components


- Product
- Instruction manual
- Bracket × 2

Sold Separately


- Terminal protection cover: M7P-COVER

Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.

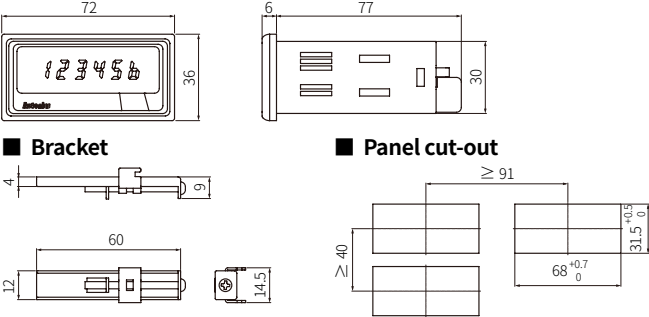

Connections

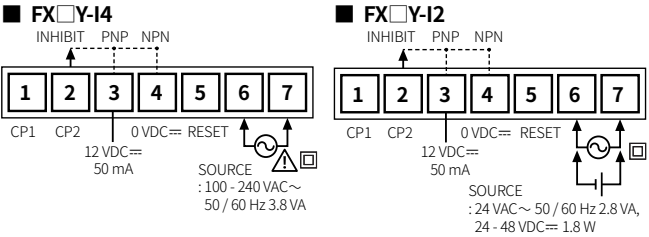


- INHIBIT: In case of timer mode, this terminal is for time hold.
 - Voltage input (PNP): connect with 12 VDC
 - No-voltage input (NPN): connect with 0 VDC

Specifications

Model	FX4Y-I□	FX6Y-I□
Display digits	4-digit	6-digit
Character size	W 8 × H 14 mm	W 4 × H 8 mm
Max. counting speed	1 / 30 / 2 k / 5 k cps	
Return time	≤ 500 ms	
Min. signal width	INHIBIT, RESET: ≈ 20 ms	
Input logic	Voltage input (PNP) - input impedance: ≤ 10.8 kΩ, [H]: 5 - 30 VDC, [L]: 0 - 2 VDC No-voltage input (NPN) - short-circuit impedance: ≤ 470 Ω, short-circuit residual voltage: ≤ 1 VDC open-circuit impedance: ≥ 100 kΩ	
Error	Repeat / SET / voltage / Temp.: ≤ ± 0.01 % ± 0.05 s	
Unit weight (packaged)	≈ 120 g (≈ 175 g)	
Certification	CE, RoHS, REACH, ENEC	

Voltage type	AC voltage	AC / DC voltage
Power supply	100 - 240 VAC ~ 50 / 60 Hz	24 VAC ~ 50 / 60 Hz, 24 - 48 VDC
Permissible voltage range	90 to 110 % of rated voltage	
Power consumption	≤ 3.8 VA	AC: ≤ 2.8 VA DC: ≤ 1.8 W
External supply power	≤ 12 VDC ± 10 % 50 mA	
Memory retention	≈ 10 years (non-volatile semiconductor memory type)	
Insulation resistance	≥ 100 MΩ (500 VDC megger)	
Dielectric strength	Between the charging part and the case : 3,000 VAC ~ 50 / 60 Hz for 1 min	Between the charging part and the case : 2,000 VAC ~ 50 / 60 Hz for 1 min
Noise immunity	± 2 kV square wave noise (pulse width: 1 μs) by the noise simulator	± 500 V square wave noise (pulse width: 1 μs) by the noise simulator
Vibration	0.75 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 1 hour	
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 minute	
Shock	300 m/s ² (≈ 30 G) in each X, Y, Z direction for 3 times	
Shock (malfunction)	100 m/s ² (≈ 10 G) in each X, Y, Z direction for 3 times	
Ambient temperature	-10 to 55 °C, storage: -25 to 65 °C (no freezing or condensation)	
Ambient humidity	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)	
Protection rating	IP40 (front part, IEC standard)	
Insulation type	Double insulation or reinforced insulation (mark: □)	

Mode Setting



Dot for Decimal Point & Hour / Min / Second

- If there is no RESET key or DIP switch input for 60 sec, it returns to RUN mode.
- [RESET] key: Setting mode ↔ RUN mode
Move the digit when changing the setting value.


Decimal point of counter

Parameter	Display	Setting range
C1-1 Setting mode	d P	-
C1-2 Decimal point setting	- - - -	[FX4Y-I□] -, -, -, -, -
	- - - - -	[FX6Y-I□] -, -, -, -, -, -

Dot for Hour / Min / Second of timer

Parameter	Display	Setting range	Setting example
T1-1 Setting mode	d P	-	-
T1-2 Setting of dot for Hour / Min / Sec	CL r	CLR: Not divided with dot	5959: 59 m 59 s
		SET: Divided with dot	0.59.59: 59 m 59 s

Detach the Case

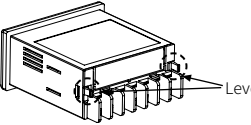

- Press the both levers and pull them from the front to detach the case and the terminal. DIP switch is located inside.
- ⚠ **Caution: Turn OFF the power before detaching the case.**

DIP Switch Setting



- Detach the case and proceed the settings. See the 'Detach the Case.'
- How to change the settings:
power OFF → change settings → power ON → press [RESET] key or input the RESET signal (≥ 20 ms) to the external terminal.

SW	Function		Defaults	
	Counter	Timer		
1	-	Time range	OFF	
2	Input operation mode		OFF	
3			OFF	
4	Count up / count down		OFF	
5	Max. counting speed	-	OFF	
6			OFF	
7	Front [RESET] key		ON	
8	Memory retention		OFF	
9	Counter / Timer		ON	
10	CP1, CP2, INHIBIT, RESET input logic		ON	

[Counter] Input operation mode

SW	2	3	4	Count up / count down & input operation mode	
OFF	OFF	OFF	Count up	Up / Down - A (command)	
ON	OFF	OFF		Up / Down - B (individual)	
OFF	ON	OFF		Up / Down - C (phase difference)	
ON	ON	OFF	Count down	Up	
OFF	OFF	ON		Up / Down - D (command)	
ON	OFF	ON		Up / Down - E (individual)	
OFF	ON	ON		Up / Down - F (phase difference)	
ON	ON	ON		Down	

[Timer] Time range &

Count up / count down					
SW	1	2	3	4-digit	6-digit
OFF	OFF	OFF	OFF	99.99 s	99999.9 s
ON	OFF	OFF	OFF	999.9 s	999999 s
OFF	ON	OFF	OFF	9999 s	99 m 59.99 s
ON	ON	OFF	OFF	99 m 59 s	999 m 59.9 s
OFF	OFF	ON	OFF	999.9 m	99999.9 m
ON	OFF	ON	OFF	99 h 59 m	99 h 59 m 59 s
OFF	ON	ON	OFF	999.9 h	9999 h 59 m
ON	ON	ON	OFF	9999 h	99999.9 h

SW-4	Count up / count down
ON	Count down
OFF	Count up

[Counter] Max. counting speed

SW	5	6	Max. counting speed
ON	OFF	OFF	1 cps
OFF	OFF	ON	30 cps
OFF	ON	OFF	2 kcps
ON	ON	ON	5 kcps

Front [RESET] key

SW-7	Front [RESET] key
ON	Use
OFF	Not used

Counter / Timer

SW-9	Counter / Timer
ON	Counter
OFF	Timer

Memory retention

SW-8	Memory retention
ON	×
OFF	○

Input logic

SW-10	Input logic
ON	NPN (no-voltage input)
OFF	PNP (voltage input)