

Display Pressure Transmitters

PTF30 Series

INSTRUCTION MANUAL

TCD210242AB

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

Failure to follow this instruction may result in personal injury, economic loss or fire.

02. Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.

Failure to follow this instruction may result in explosion or fire.

03. The explosion proof standard of this unit is Ex d IIC T6, protection structure of this unit is IP67 and the range of max. surface temperature is below 85°C.

04. Do not disassemble or modify the unit.

Failure to follow this instruction may result in fire or electric shock.

⚠ Caution Failure to follow instructions may result in injury or product damage.

01. Do not apply beyond rated pressure.

Failure to follow this instruction may result in product damage.

02. Use the unit within the rated specifications.

Failure to follow this instruction may result in fire or product damage.

03. Keep the product away from metal chip, dust, and wire residue which flow into the unit.

Failure to follow this instruction may result in fire or product damage.

04. Check 'Connections' before wiring.

Failure to follow this instruction may result in explosion or fire.

05. This product is designed to detect the pressure of noncorrosive medium. Do not use for corrosive medium.

Failure to follow this instruction may result in product damage.

06. Use a dry cloth to clean the unit, and do not use water or organic solvent.

Failure to follow this instruction may result in fire or electric shock.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- The connection of this unit should be separated from the power line and high voltage line in order to prevent inductive noise.
- Do not use this unit near the high frequency instruments.
- Switch or circuit breaker should be installed nearby users for convenient control.
- Use verified explosion-proof cable gland or sealing fitting (explosion proof standard: over Ex d IIC T6, IP rating: over IP67 protection structure).
- Use dedicated external terminal for earth. For connecting earth, use a spring washer and earth cable which is over 4 mm².

- This unit may be used in the following environments.
 - Indoor / Outdoor (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category II

This explosion-proof unit is certified and the same specifications which is reported to Korea Gas Safety Corporation. (This unit is manufactured following by the announcement 2013-54 of Ministry of Employment and Labor of Korea.)

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

PTF30 - ① ② N ③ ④ - (⑤)

① Pressure type

G: Gauge, sealed gauge⁰¹⁾

A: Absolute pressure

③ Install bracket

N: Without bracket

B: With bracket

② Rated pressure range

	Gauge	Absolute
1	0 to 35 kPa	0 to 35 kPa
2	0 to 0.1 MPa	0 to 0.1 MPa
3	0 to 0.2 MPa	0 to 0.2 MPa
4	0 to 0.7 MPa	0 to 0.7 MPa
5	0 to 2 MPa	0 to 2 MPa
6	0 to 3.5 MPa	0 to 3.5 MPa
7	0 to 7 MPa	
8	0 to 21 MPa	
9	0 to 35 MPa	
	Sealed gauge	
A	-35 to 0 kPa	
C	-0.1 to 0 MPa	
F	-0.1 to 0.2 MPa	
H	-0.1 to 0.7 MPa	
M	-0.1 to 2 MPa	
O	-0.1 to 3.5 MPa	
Z	Custom	

01) The pressure is sealed gauge pressure. The unit is sealed structure. It is based on atmospheric pressure 101.3 kPa (1.013 bar).

02) The pressure range is set to customized pressure range. (select "Z" at ② Rated pressure range)

Product Components

- Product
- Instruction manual

Specifications

Series	PTF30
Applicable medium	Gas, liquid, oil (except corrosive environment of SUS316)
Power supply	15 - 35 VDC≐
Output	DC 4 - 20 mA (2-wire, impedance: ≤ 30 Ω, low limit: 3.6 mA (-2.5 %), high limit: 21.6 mA (+10 %)
Accuracy⁰¹⁾	± 0.2 % of F.S. (at 25 °C)
Temperature characteristic	± (0.075 % × URL + 0.15 % × Span) (at 20 °C)
Sampling period	300 ms
Setting method	Front key
Display type	12 segment LCD, 4 digit
Certification	CE UL FM
Unit weight	≈ 1.2 kg


01) F.S. is rated pressure range.

Insulation Resistance	≥ 100 MΩ (500 VDC≐ megger)
Dielectric strength	Between the charging part and the case: 1,000 VAC~ for 1 min
Vibration	0.75 mm amplitude at frequency of 5 to 55 Hz in each X, Y, Z direction for 2 hours
Noise immunity	Square shaped noise by noise simulator (pulse width 1 μs) ± 240 V
Memory retention	≈ 10 years (non-volatile semiconductor memory type)
Ambient temperature	-20 to 70 °C, storage: -20 to 80 °C (rated at no freezing or condensation)
Ambient humidity	0 to 85 %RH (rated at no freezing or condensation)
Protection structure	IP67 (IEC standard)
Material	Body: aluminum (AlDc.8S), cover O - Ring: Buna N, diaphragm: SUS316, connection: SUS316
Explosion class⁰¹⁾	Ex d IIC T6


01) This explosion class is acquired and managed by Konics Co., Ltd.

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

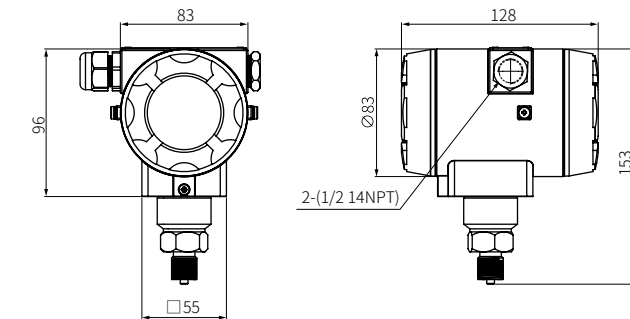


■ With bracket

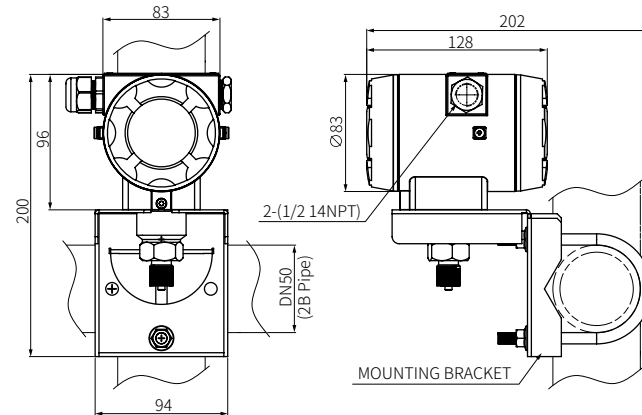

Connections

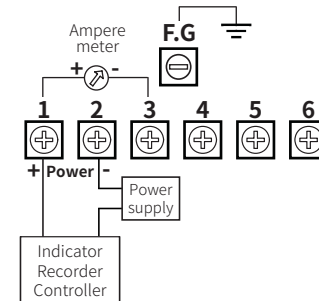


Unit Descriptions

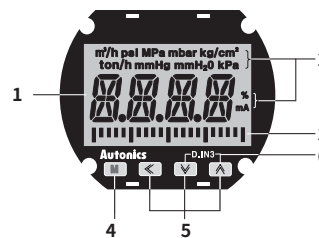

- 1. Display part**
Displays PV (present value), SV (Setting value) and error discription.
- 2. Unit display part**
Displays the currently set input unit.
- 3. Output scale bar graph**
Displays output DC 4 - 20 mA as scale bar graph by 5% unit.
- 4. [M] key**
Used to enter parameter mode, move parameters and save SV.
- 5. [◀], [▼], [▲] key**
Used to enter parameter set mode, move digits.
- 6. D.IN3**
Press [▼] + [▲] keys at the same time for 3 sec to executes digital input function. (parameter)

Mode Setting

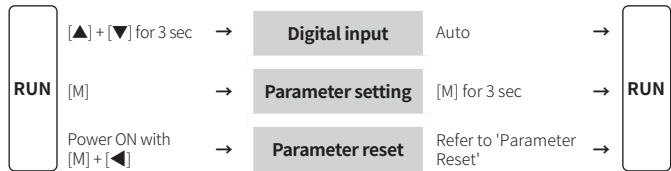

Parameter setting

- Some parameters are activated/deactivated depending on the model or setting of other parameters.
- After entering setting group, press the [M] key for 3 sec or there is no additional key input in 30 sec, it returns to RUN mode.
- [M] key: saves setting value and moves to the next parameter.
- [◀] key: moves digit
- [▼], [▲] key: changes setting value,

Parameter	Display	Default	Setting range	Condition
1-1 Pressure unit	UNIT	bar	bar, mbar, Pa, kPa, MPa, G.CM (gf/cm ²), KG.CM (kgf/cm ²), M.M.H2 (mmH ₂ O), psi, mmHg, %, OFF	-
1-2 Input value low limit	L-RL	0.000	Within rated pressure range	-
1-3 Input value high limit	H-RL	0.350		-
1-4 Decimal point	dP	0.000	0.0, 0.00, 0.000, 0 • Setting range differs depending on the rated pressure range	-
1-5 Display scale low limit	L-SC	0.000	-1999 to 9999	1-1 Pressure unit: %, OFF
1-6 Display scale high limit	H-SC	1000		
1-7 Zero-point adjustment	ZERO	000	-999 to 999	-
1-8 Slope correction	SPRN	1000	0.900 to 1.100	-
1-9 Output scale low limit	L-OL	0.000	Within rated pressure range or within 1-5 / 6 display scale low / high limit*	* 1-1 Pressure unit: %, OFF
1-10 Output scale high limit	H-OL	0.350		
1-11 Moving average digital filter	MAVF	04	01 (OFF) to 16	-
1-12 Digital input	di-K	Hold	HOLD: hold display value, Z-TM: remote zero ⁰¹⁾	-
1-13 RUN mode display value 1	dSP1	PV	PV: present value, OUT: output, L.PEK: min. value ⁰²⁾ , H.PEK: max. value ⁰²⁾	-
1-14 RUN mode display value 2	dSP2	PV		-
1-15 Dual unit	tUF	oFF	[Sealed gauge model] OFF, ON	-
1-16 Lock	LoCK	oFF	OFF: enable to check / set, LOC.1: enable to check / disable to set, LOC.2: disable to check / set	-

01) It is possible to check and change correction value in 1-7 zero-point adjustment.

02) When selecting LPEK / HPEK, left / right side of output scale bar graph flashes for 0.5sec. When the min. / max. value is out of the temperature range, it displays LLLL / HHHH and it can be initialized to PV by pressing [▲] + [▼] keys for 3 sec.

Parameter Reset

Resets all parameters as factory default.

- While holding down the [M] + [◀] keys, turn ON the power of the device.
- When 'CLR' appears in display part, press [M] key to parameter reset mode.
- When 'NO' appears in display part, change the text to 'YES' by pressing [▲], [▼] key in display part and press [M] key to finish the reset process.

Errors

Display	Operation	Troubleshooting
HHHH	Flashes when measured pressure is higher than the input value high limit.	Adjust measured pressure within the input value high / low limit.
LLLL	Flashes when measured pressure is higher than the input value low limit.	
EEEE	Flashes when there in an error to SV.	Check the setting values and reset.